 


PATLITE® USB Signal Tower / Body Unit
 <TYPE> LR6-3USB□-RYG/LR6-USB□ Instruction Manual [digest version] English

- To the Contractor
- Read this manual carefully prior to installation.
- If there are any questions concerning this product, refer to the contact information at the end of this document and contact your nearest PATLITE Sales Representative.

◆ The following symbols classifies the precautions into the following two categories depending on the degree of injury or damage caused by the failure to follow them:

◆ The following symbols classify and describe the content of associated messages.



- ◆ For handling the product's accessories, observe the following.
 - Do not disassemble other than removable parts.
 - Do not modify this product.
 - Use only the specified replacement parts listed in the manual [WEB version]

◇ LR6-3USB□-RYG

◇ LR6-USB□

◇ LR6-3USB□-RYG / LR6-USB□ Common

① Body Unit

② USB Connector (Type-B)

③ Volume Switch

④ Head Cover

⑤ Waterproof Packing

⑥ LED Unit R

⑦ LED Unit Y

⑧ LED Unit G

- Using the software library (DLL), you can control LED units and body unit's buzzer. For details, refer to the instruction manual [WEB version].
- Download the software library (DLL) and the instruction manual from our website identified at the beginning of this document.

PATLITE Corporation (G2)

PATLITE Corporation ■Head office	■ www.patlite.com/
PATLITE (U.S.A.) Corporation	■ www.patlite.com/
PATLITE Europe GmbH ■Germany	■ www.patlite.eu/
PATLITE (SINGAPORE) PTE LTD	■ www.patlite-ap.com/
PATLITE (CHINA) Corporation	■ www.patlite.cn/
PATLITE KOREA CO., LTD.	■ www.patlite.co.kr/
PATLITE TAIWAN CO., LTD.	■ www.patlite.tw/
PATLITE (THAILAND) CO., LTD.	■ www.patlite.co.th/
PATLITE MEXICO S.A. de C.V.	■ www.patlite.com.mx/